



just-us adjustment features & instructions


seat height-adjustment

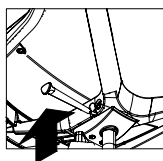

Seat height can be adjusted by lifting the lever underneath the seat on the right side. When the lever is lifted up, the weight of the body will cause the seat to lower. Releasing the lever stops the seat at the desired height. Lifting the lever up with no weight on the seat allows it to rise.

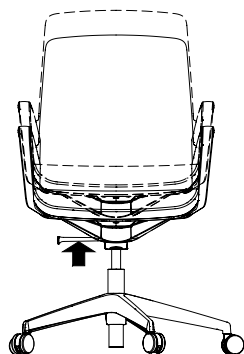

back tilt lock adjustment

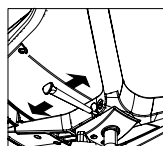

Moving the lever found under the right side of the seat locks and unlocks the recline. Push lever forward to lock chair in upright position. Pull the lever backwards to unlock for tilting action.

