## LUUM

## FOCAL POINT FINISHING DETAILS



To join panels, it is recommended to use the fabric selvedges to create a French seam. For the side and bottom hems, fold the fabric over twice and stitch along the area.




Box pleat uses flat pleating to create a geometric aesthetic using a heavy-duty buckram.



Ripplefold creates a floating aesthetic. No buckram is necessary and ripplefold snap tape is used instead. In areas where the drapery will visible from the back it is recommended to conceal the tape with grosgrain ribbon.

## LUUM

## NRC 0.95 DRAPED AT 100% FULLNESS + 99.9% OPACITY

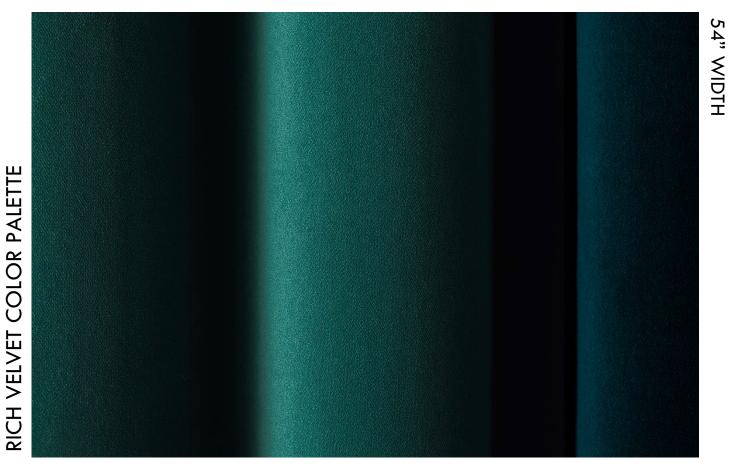

PRIVACY, ACOUSTICS, LIGHT DIMMING