










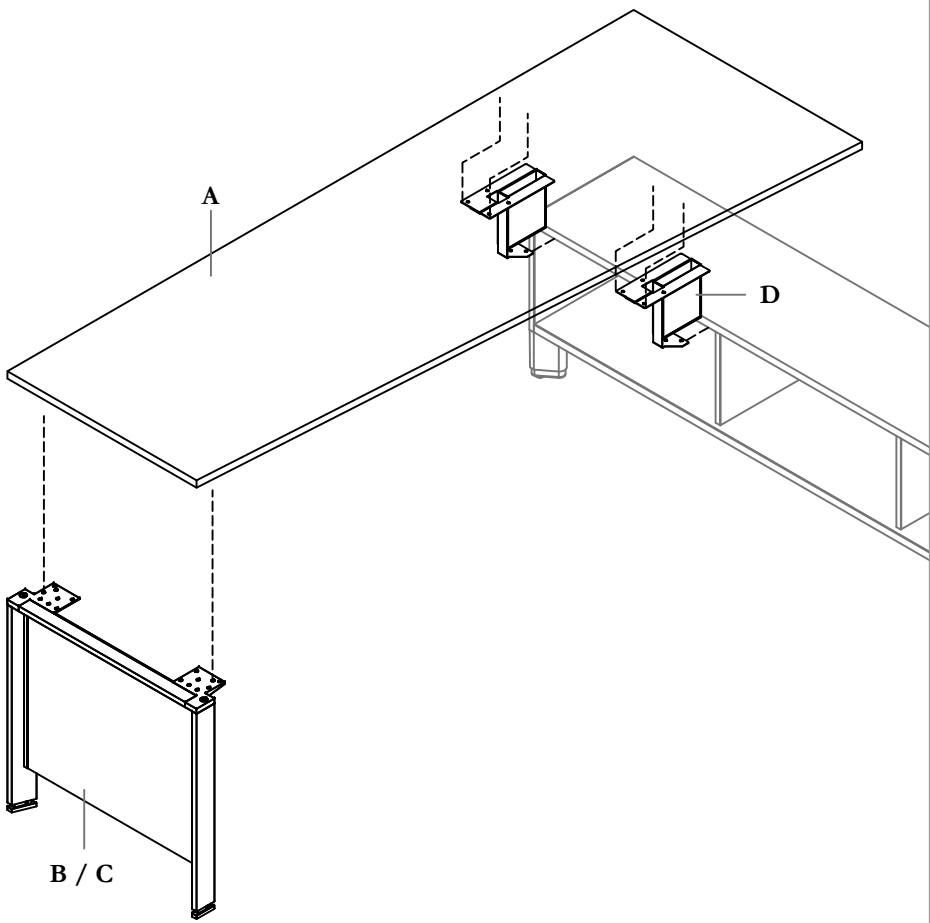



Section: WORKSURFACES AND WORKSURFACE SUPPORTS

Description: SEMI-SUSPENDED GABLE & LOW CREDENZA TO WORKSURFACE SUPPORT


Wedge Worksurface (UNWW),  
Semi-Suspended Gable (UNGSN), Reconfigurable Low  
Credenza to Worksurface Supports (UWCPWNF)

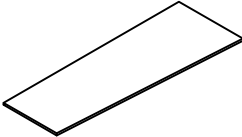

Part and Product Identification

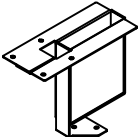		<b>A</b> - Wedge Worksurface (UNWW) x1	
UNGSN with Infill		<b>B1</b> - Gable Infill Panel (C05-4921) x1	
		<b>B2</b> - Horizontal Spanner (A23-1677) x1	
		<b>B3</b> - Gable Post Sub-Assembly - With Infill (N09-2732L) x1 (N09-2732R) x1	
UNGSN without Infill		<b>C1</b> - Horizontal Spanner (A23-1677) x1	
		<b>C2</b> - Gable Post Sub-Assembly - No Infill (N09-2333L) x1 (N09-2333R) x1	
UWCPWNF		<b>B4</b> - 1/4" -20 x 15mm Murakoshi Screw, Zinc (E01-0635) x6	
		<b>B5</b> - #10 x 7/8", Quad, Pan Washer Hd, Wood Screw (E07-0077) x16	
UWCPWNF		<b>C3</b> - 1/4" -20 x 15mm Murakoshi Screw (E01-0635) x2	
		<b>C4</b> - #10 x 7/8", Quad, Pan Washer Hd, Wood Screw (E07-0077) x16	
UWCPWNF		<b>D1</b> - Low Credenza to Worksurface Bracket - Fixed Height (N09-2966) x2	
		<b>D2</b> - #10 x 7/8", Quad, Pan Washer Hd, Wood Screw (E07-0077) x14	


### ASSEMBLE GABLE

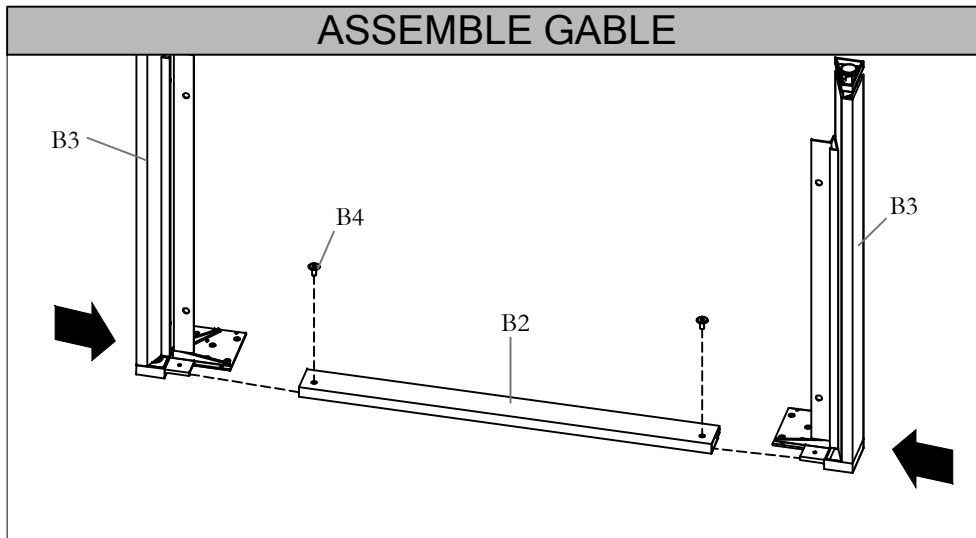

STEP 1: Fasten the Horizontal Spanner to the left and right Gable Post assemblies.


**NOTE:** Follow STEPs 1-2 to install Semi-suspended Gable without infill.

### INSTALL GABLE ONTO WORKSURFACE

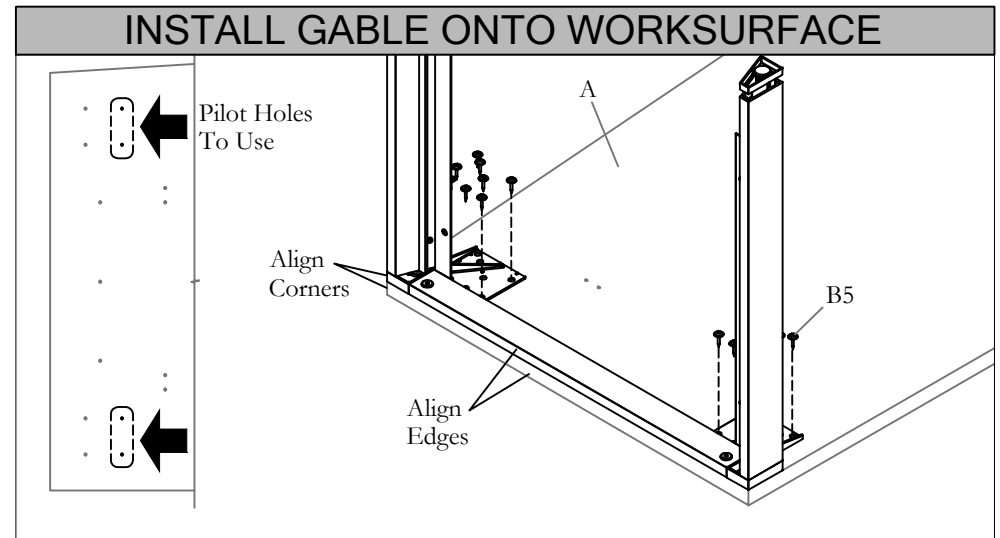


STEP 2: On a clean surface, place the Worksurface upside down. Using pilot holes provided as a location guide, secure Gable onto Worksurface. Note that the Leg corners and edges should be aligned with those of the Worksurface.

### SLIDE INFILL PANEL INTO CHANNELS ON POSTS

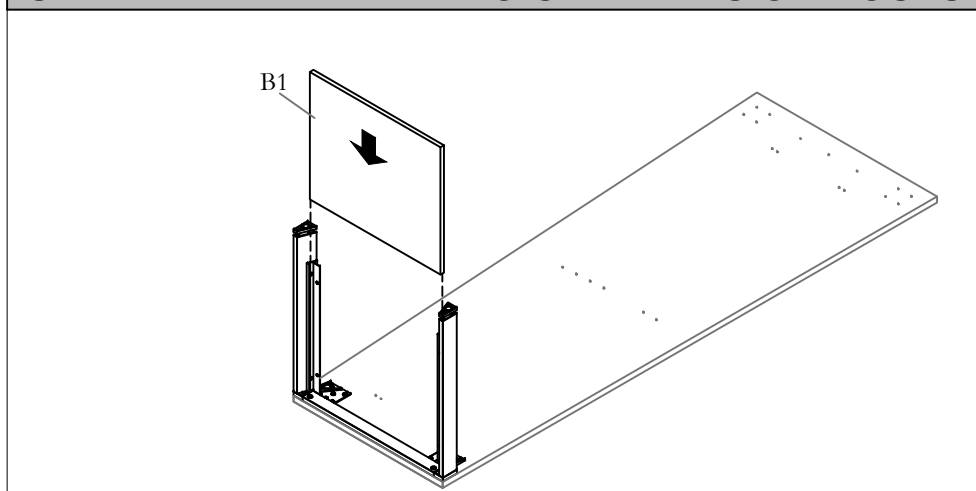

STEP 3.

### FASTEN THE INFILL PANEL TO THE POSTS

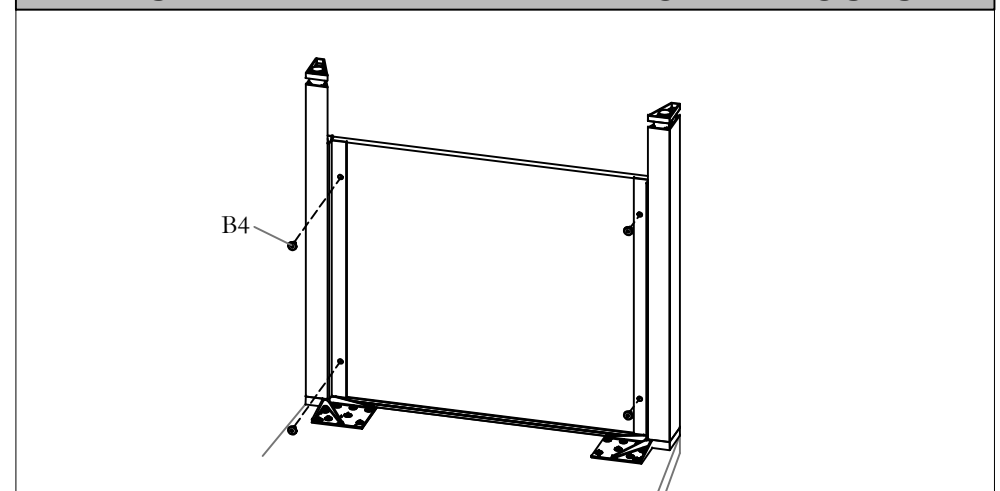


STEP 4.

Section: **WORKSURFACES AND WORKSURFACE SUPPORTS**


Description: **LOW CREDENZA TO WORKSURFACE SUPPORT (UWCPWNF) INSTALLATION**

**FIT BRACKETS INTO CREDENZA**

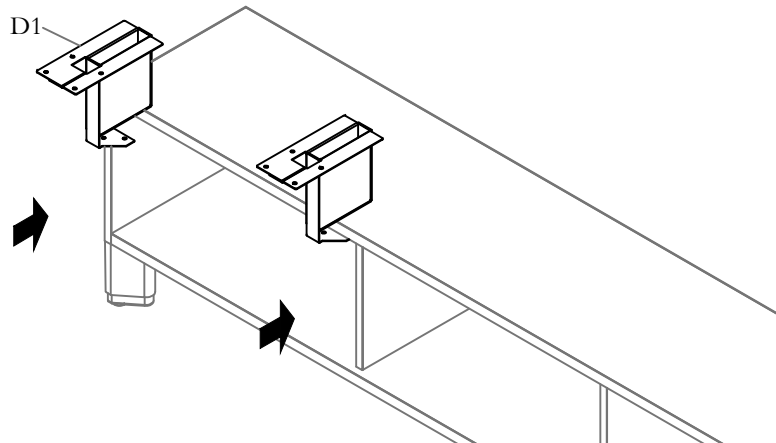

STEP 1: Engage Brackets into the top edge of Credenza as shown. Do not fasten. See STEP 3 for install locations.


**PLACE FOAM TAPE INTO FRAME TOP RAIL**

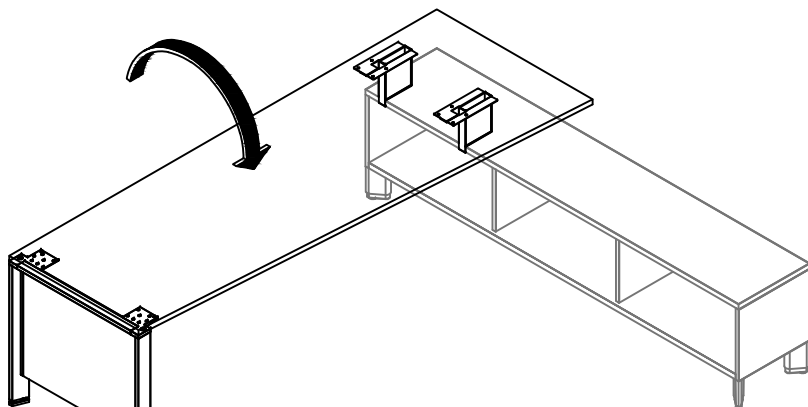


STEP 2.

**ALIGNMENT - BRACKET PLACEMENT**


Knife Edge Style Worksurfaces

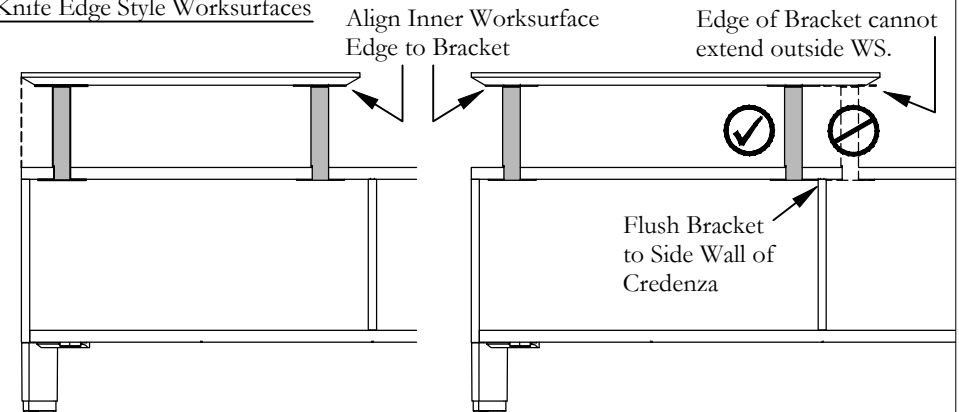


Flat Edge Style Worksurfaces

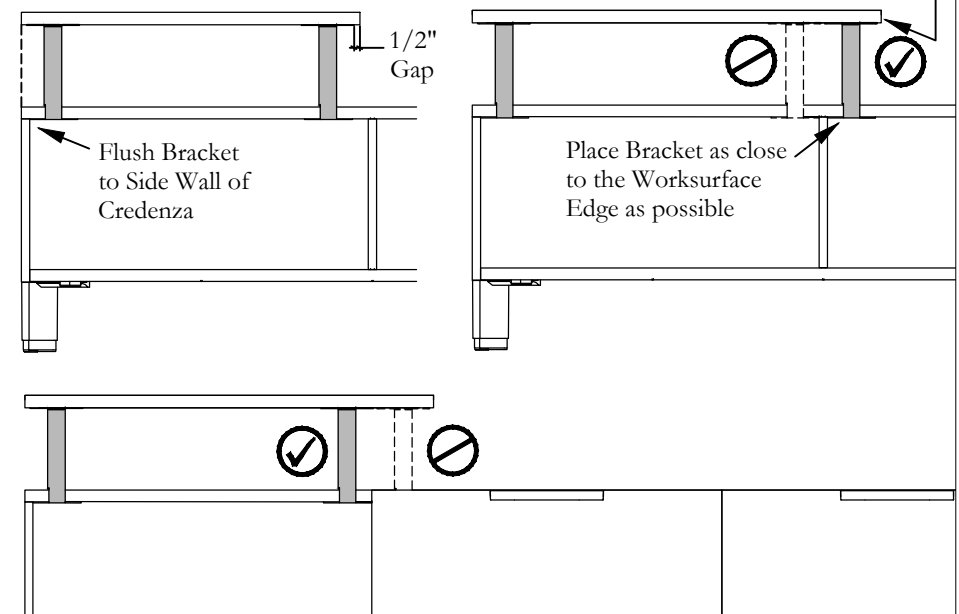


STEP 3a: Align Worksurface and Brackets. Guidelines for placing Brackets: (1) Put the Brackets as far apart as possible. (2) Ensure Bracket does not extend outside Worksurface or if possible, leave a 1/2" gap. (3) Both Brackets can fit into a single credenza opening or different openings. (4) Do not install Bracket into any drawer space.

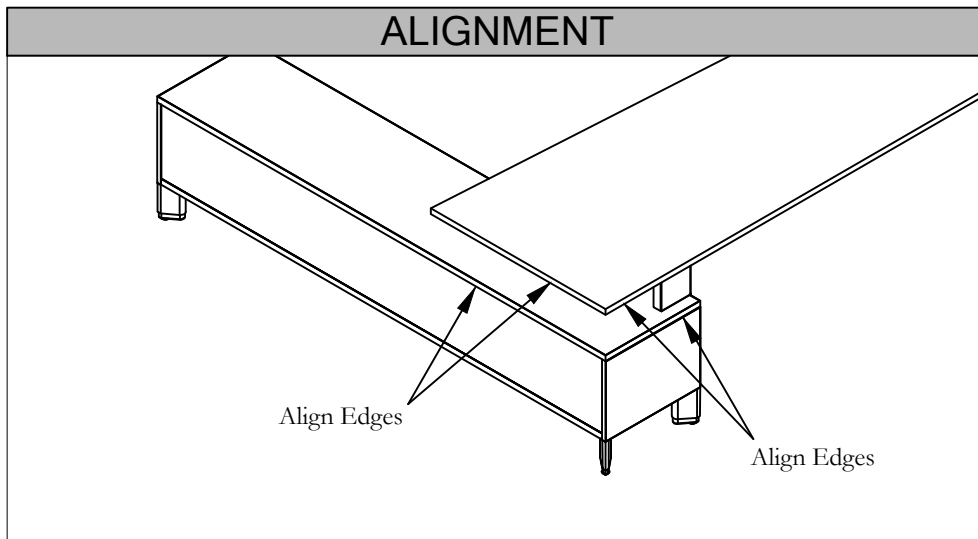

STEP 3b: Align Worksurface and Credenza.

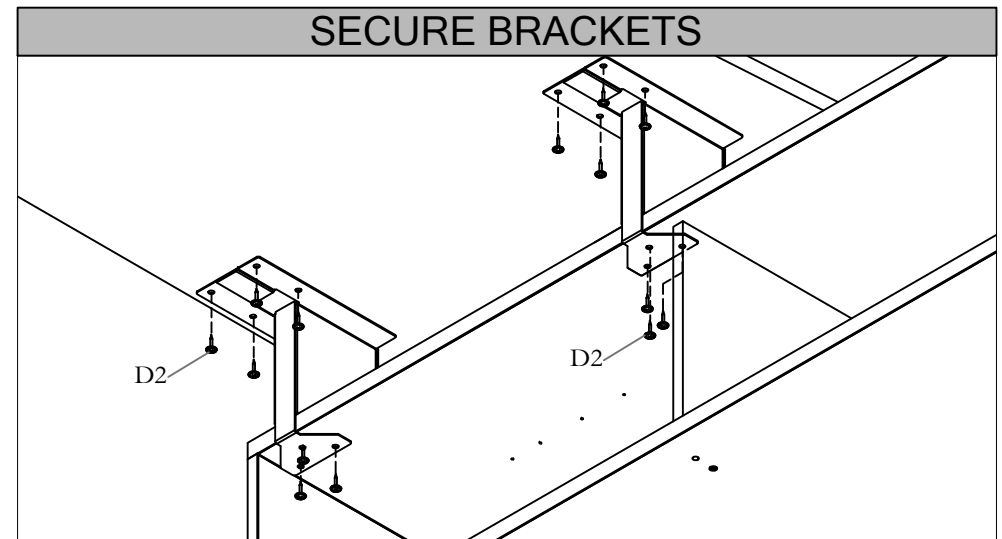

STEP 4: Secure Brackets with screws provided.

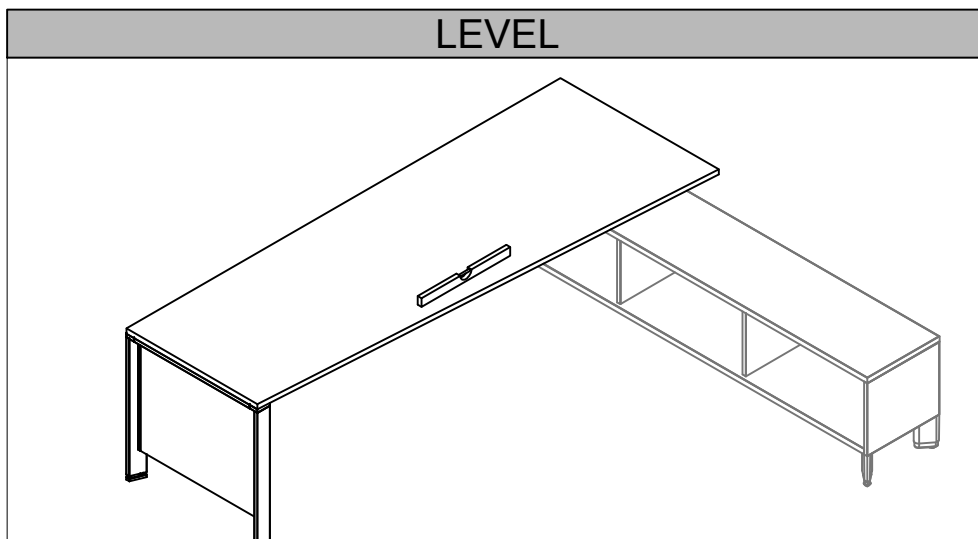

STEP 5.

