

byward

INDEX

By Section


*Click on the desired Installation Guide to jump to the Guide page.

Product Name	Product Code	Guide No.	Last Updated
DESK AND RETURN			
Return, Wall Mounted	LWBRW	TLW_001	Sept 2024
ACCESSORIES			
Byward Wall Shelves	LWBWS	TLW_002	Sept 2024


Product Name	Product Code	Guide No.	Last Updated
--------------	--------------	-----------	--------------

Product Name	Product Code	Guide No.	Last Updated
NO INSTALLATION GUIDE			
Low Cabinet, Top access	LWBCT	No Guide	May 2021
High Cabinet	LWBHC	No Guide	May 2021
Medium Tower	LWBTM	No Guide	May 2021
High Tower	LWBTH	No Guide	May 2021
Wall Shelves	LWBWS	No Guide	May 2021
Desk	LWBDS	No Guide	May 2021
Desk with Pedestal	LWBDP	No Guide	May 2021
Return with storage	LWBRS	No Guide	May 2021
Carrier Desk	LWCD	No Guide	May 2021


Wall Mounted Return (LWBRW)

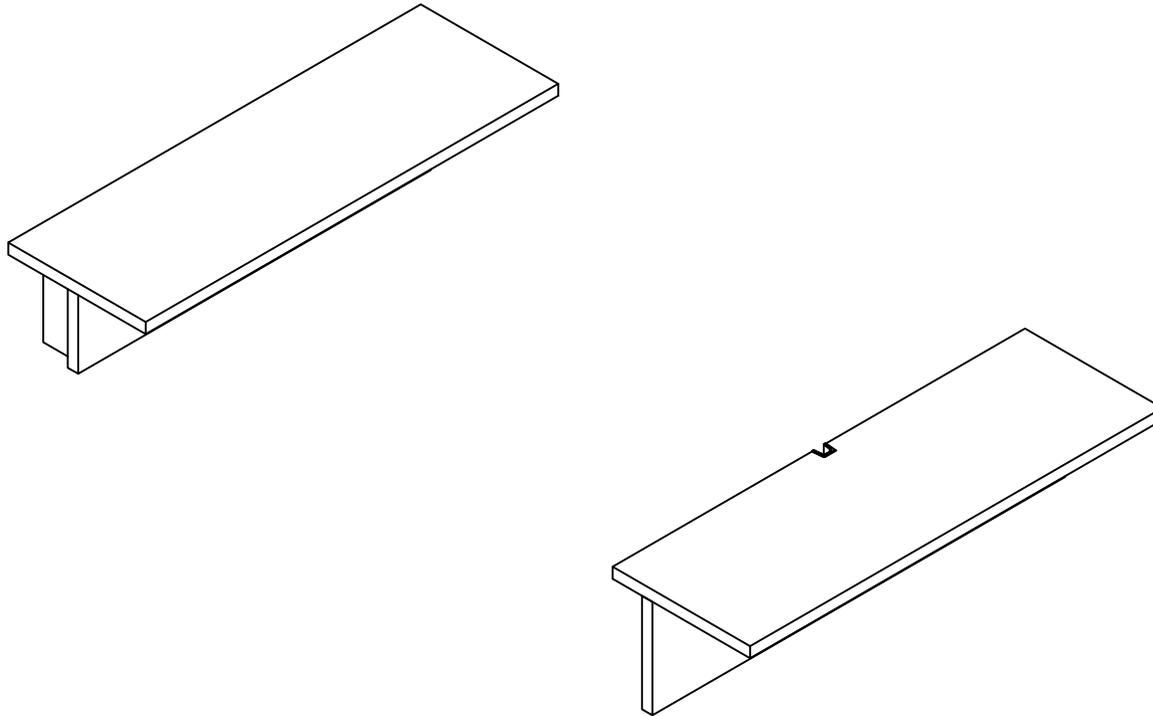

Part and Product Identification

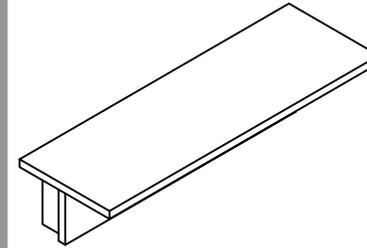

or

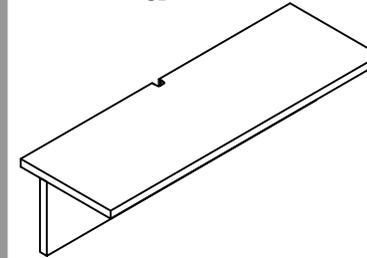

A - Worksurface
(C07-6727) x1




B - Special-Mouse Hole
Wire Management
Grommet
(B02-0547) x1



C - Anti-Lift Bracket
(A16-8563) x2



D - Screw 1/4-20X5/8 QD
(E01-0992) x4




E - Flush Plate
(UNRF) x1

Section: **RETURN**

Date: Sept 2024 Page No: 2 of 3
TLW_001


Description: **RETURN, WALL MOUNT**

INSTALL WALL CLEATS

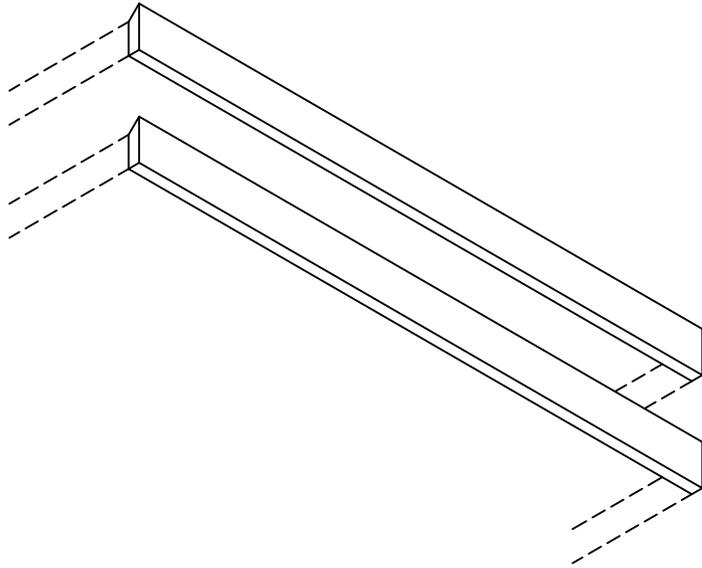



NOTE: Wood Wall Cleats will be in two splits when Surface Grommet (B) is selected for wire management purposes

NOTE: Installer is responsible to assess the site condition and provide applicable hardware to attach the cleats to a wall.

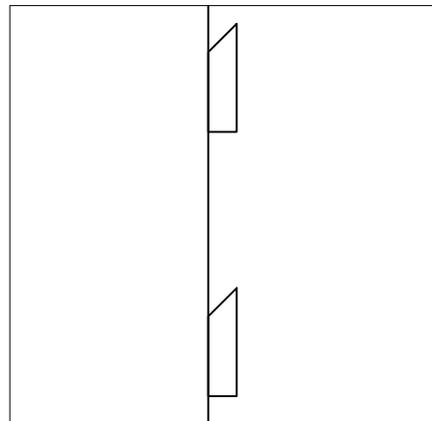


STEP 1: Install the Wood Wall Cleats as shown

INSTALL WORKSURFACE

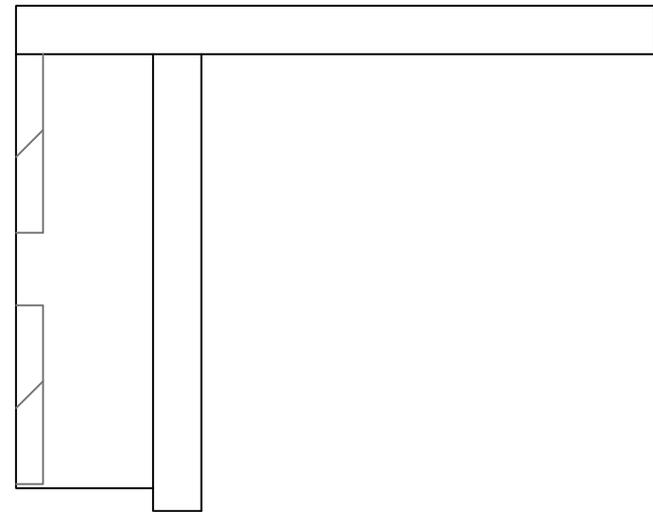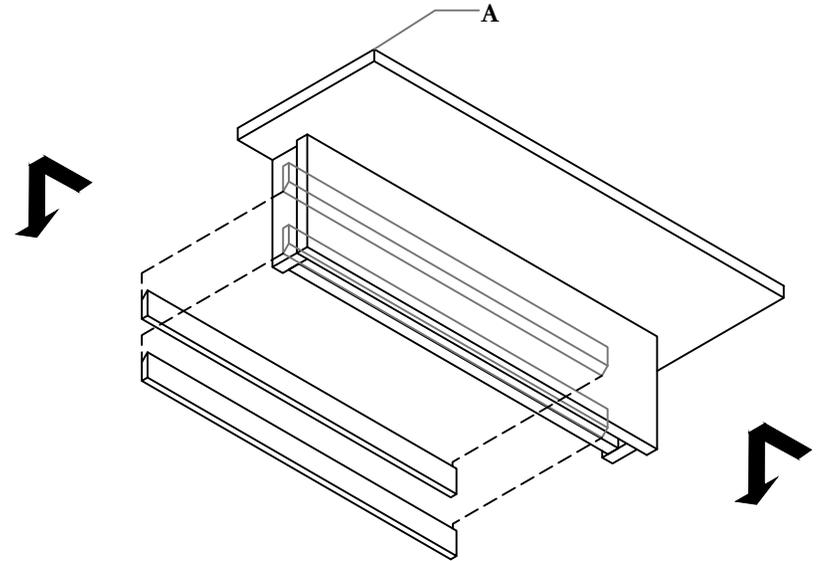


STEP 2: Simply place the Worksurface on installed Wall Cleats as shown

INSTALL ANTLIFT BRACKETS

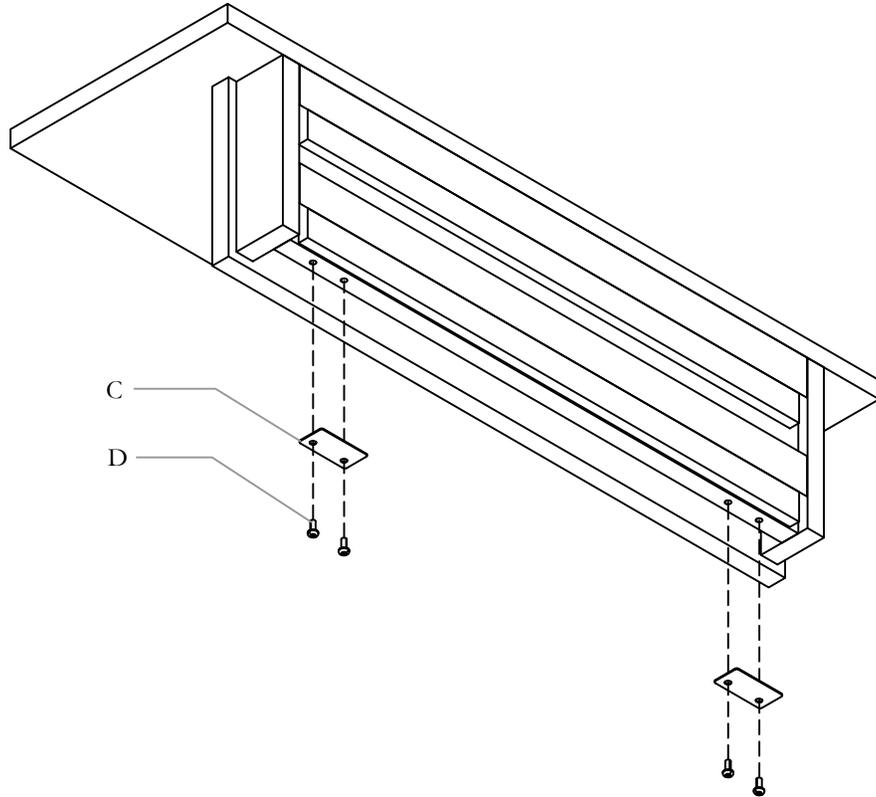


STEP 3: Install Antilift Brackets using screws as shown

TETHERING

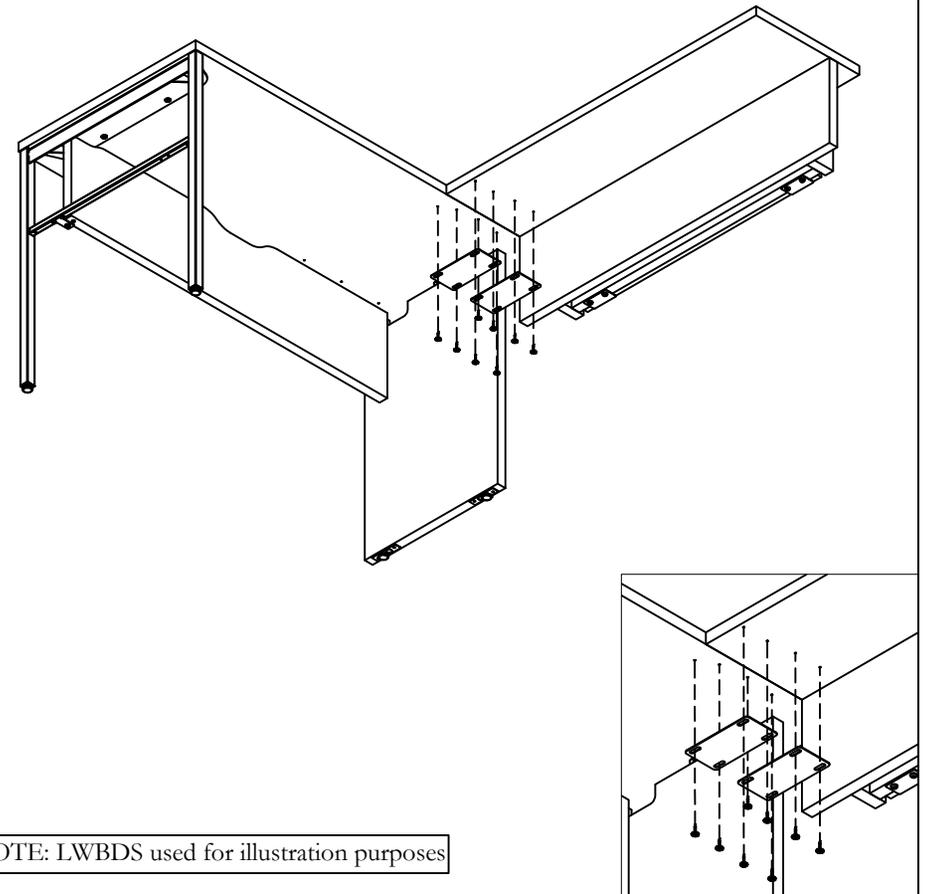


STEP 4: Tether the Worksurface with the Main Desk using Flush Plates as shown

Byward Wall Shelves (LWBWS)

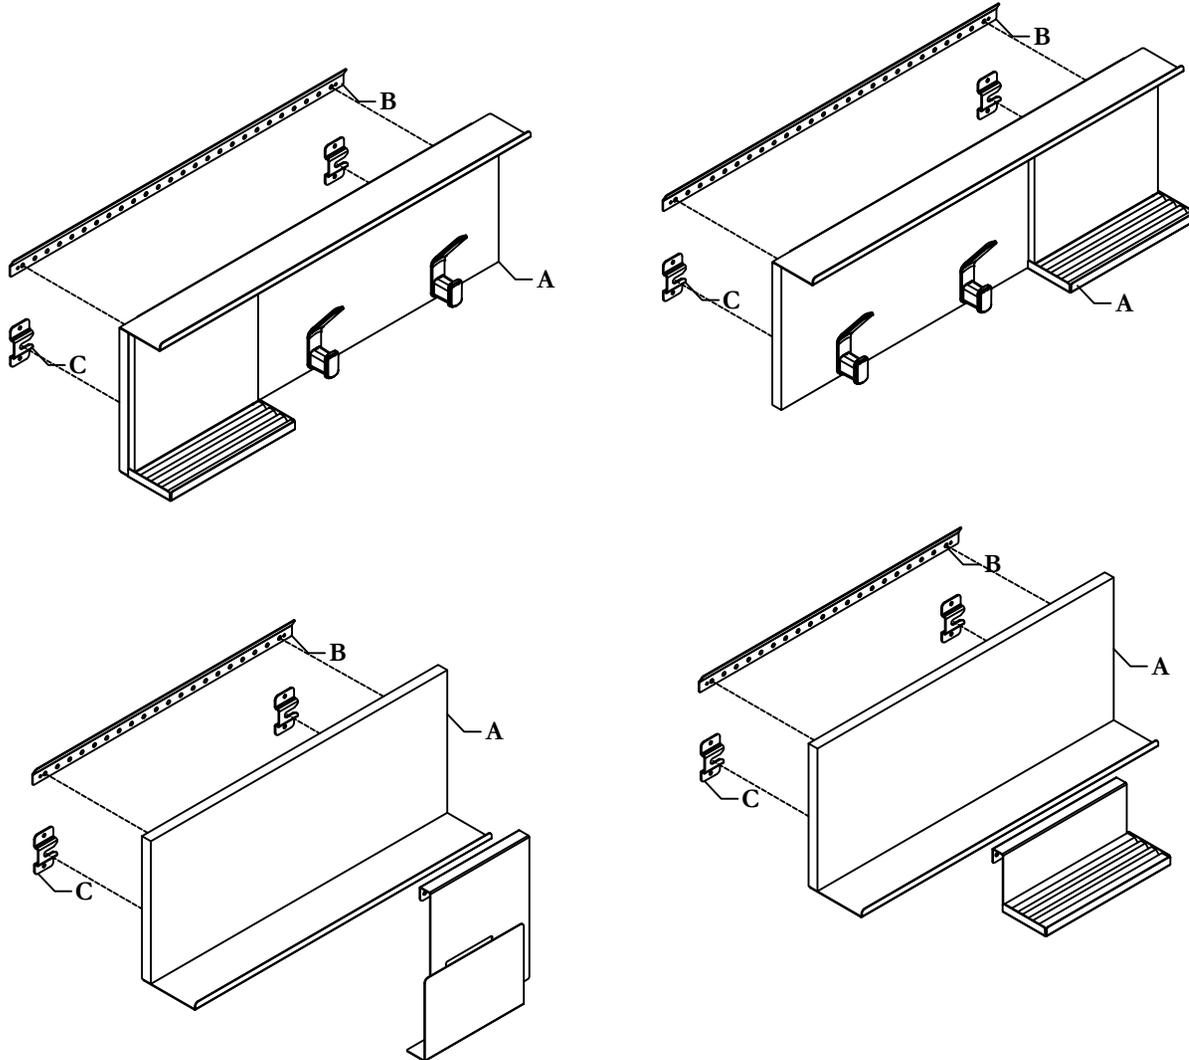


Part and Product Identification


A - Shelf Style
(LWBWS_) x1

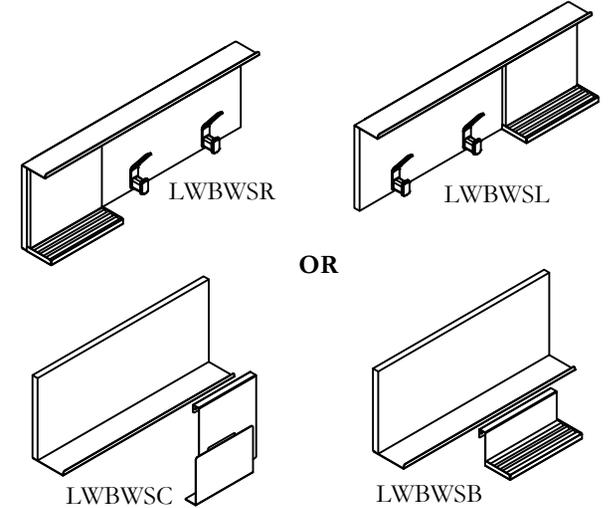


B - Bracket, Wall Attachment
(A16-8934-X) x1

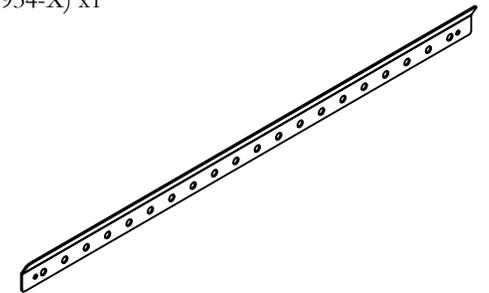

C - Bracket, Wall Attachment
(A16-8601) x2




PLACEMENT OF WALL CHANNEL BRACKET

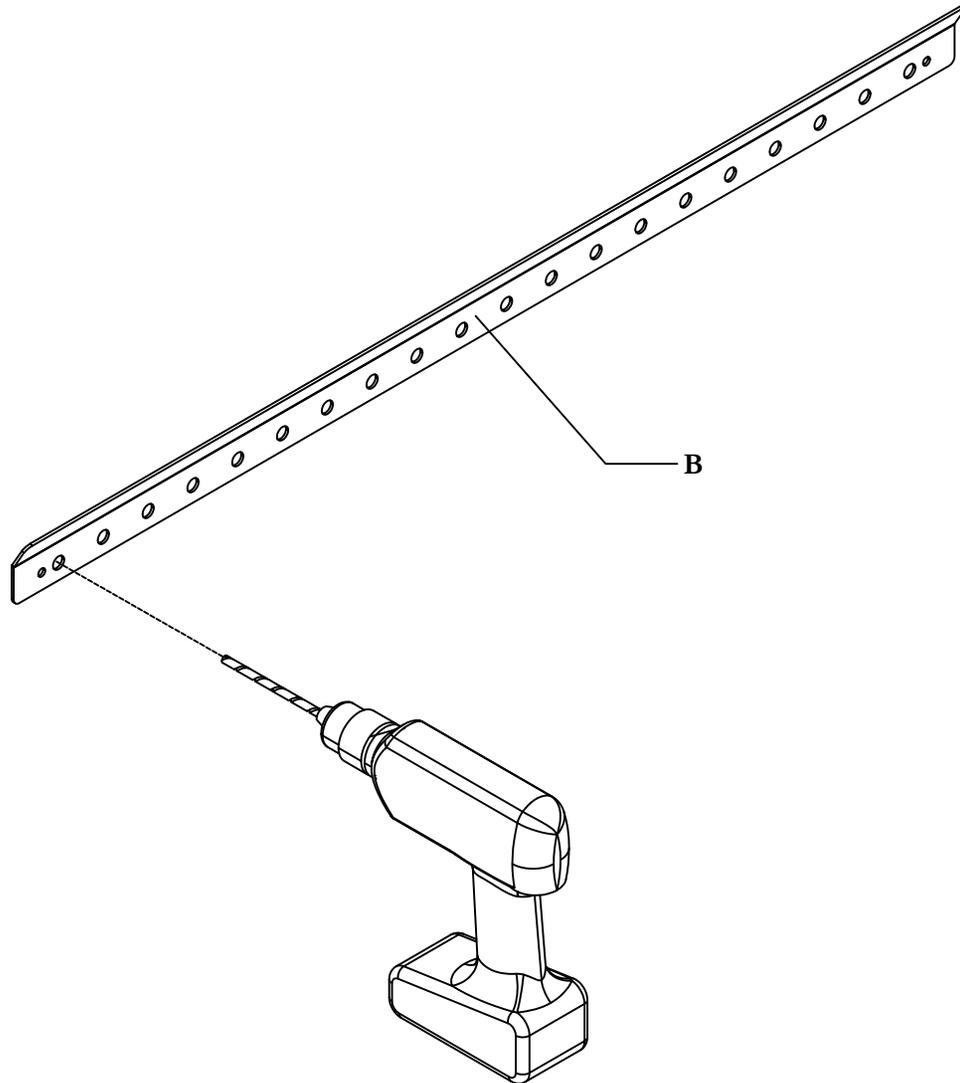

STEP 1: Position channel bracket on the wall. Mark the position of the holes and drill two holes in the wall.



SECURING THE WALL CHANNEL BRACKET

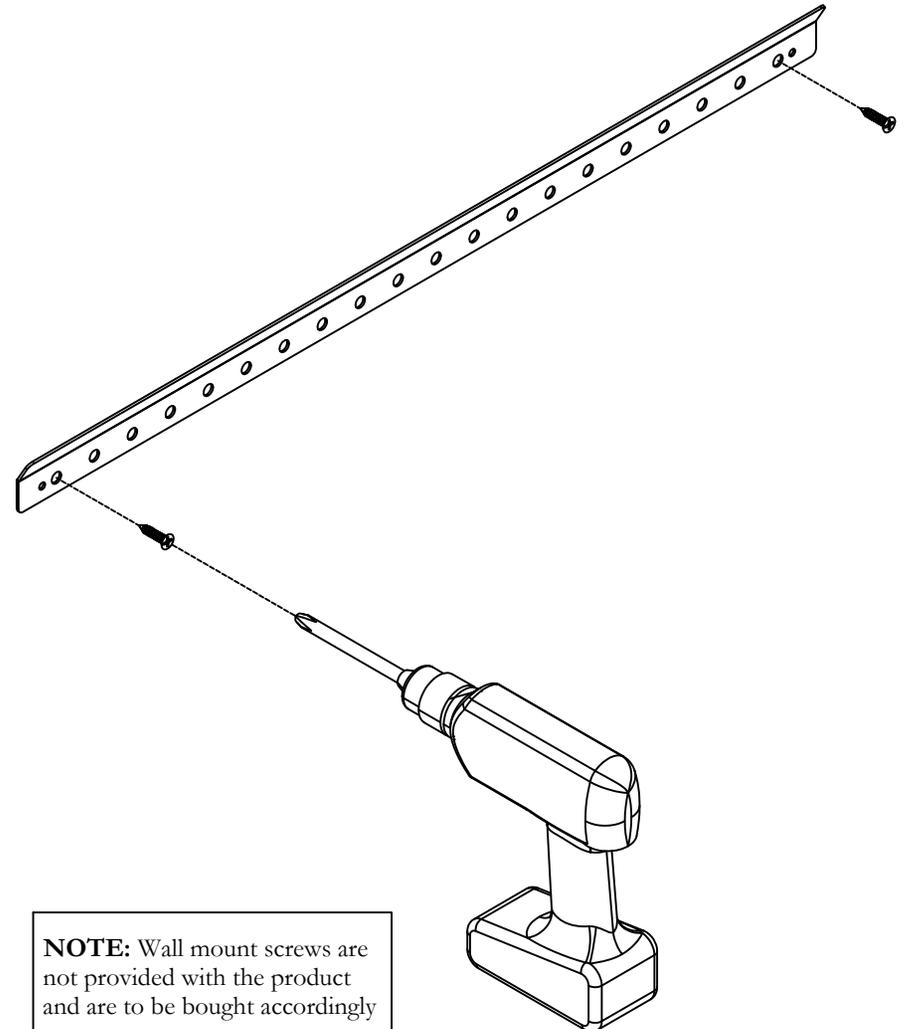

NOTE: Wall mount screws are not provided with the product and are to be bought accordingly


STEP 2: Secure the channel bracket using wall mount screws.

PLACEMENT OF WALL BRACKETS

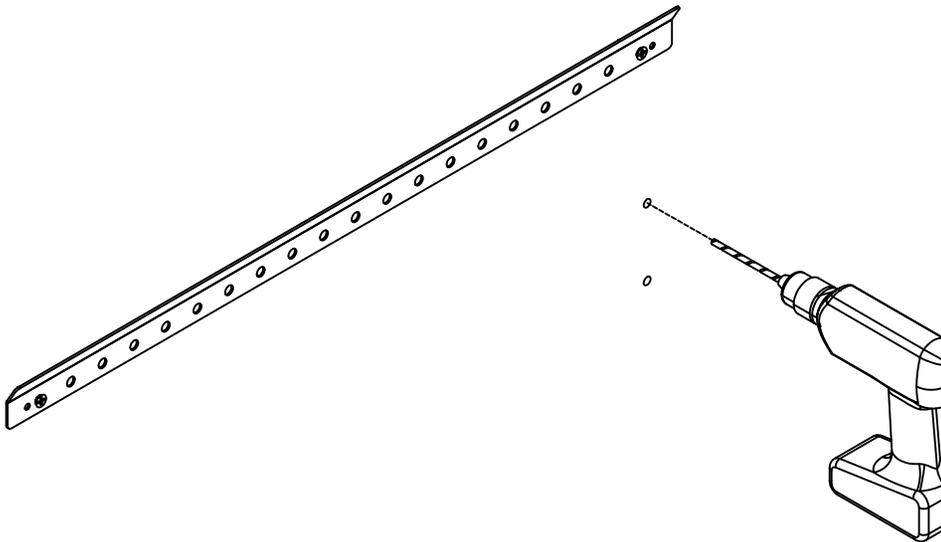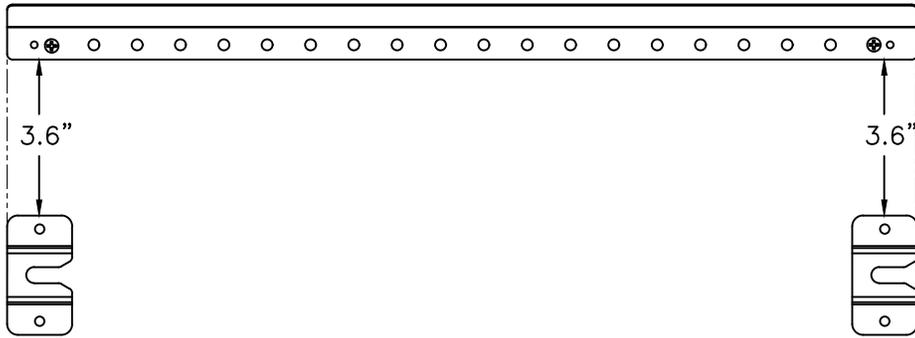



STEP 3: Position the wall brackets so that their edges align and they are 3.6" below the channel bracket. Mark the location of the holes and drill 2 holes for each bracket.

SECURING THE WALL BRACKETS

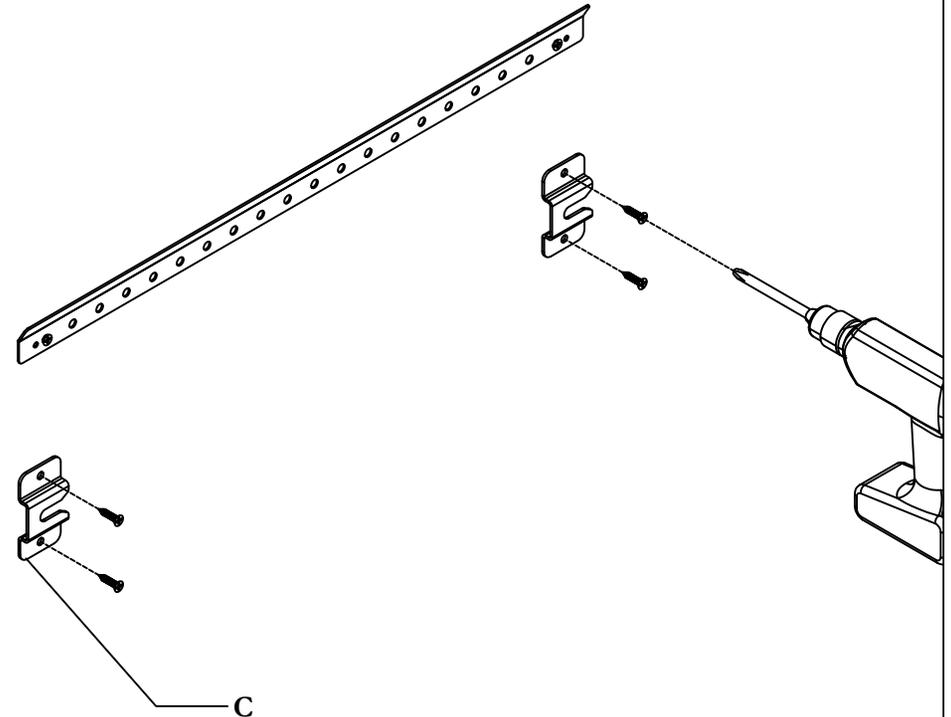

STEP 4: Secure the wall brackets using wall mount screws.

SECURE PLACEMENT OF THE WALL SHELF

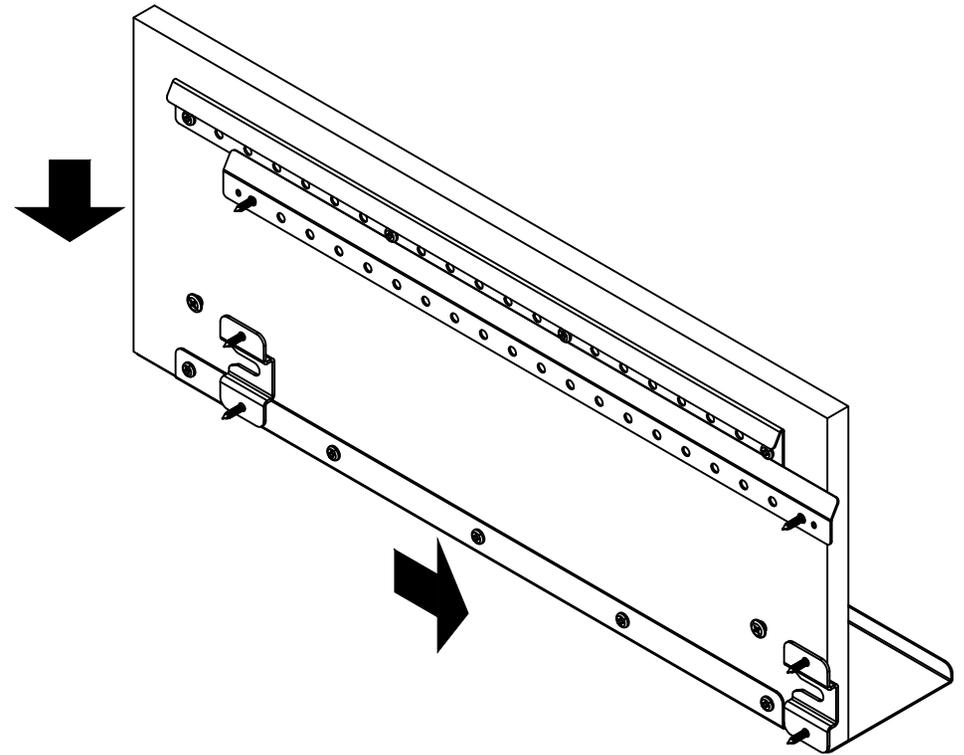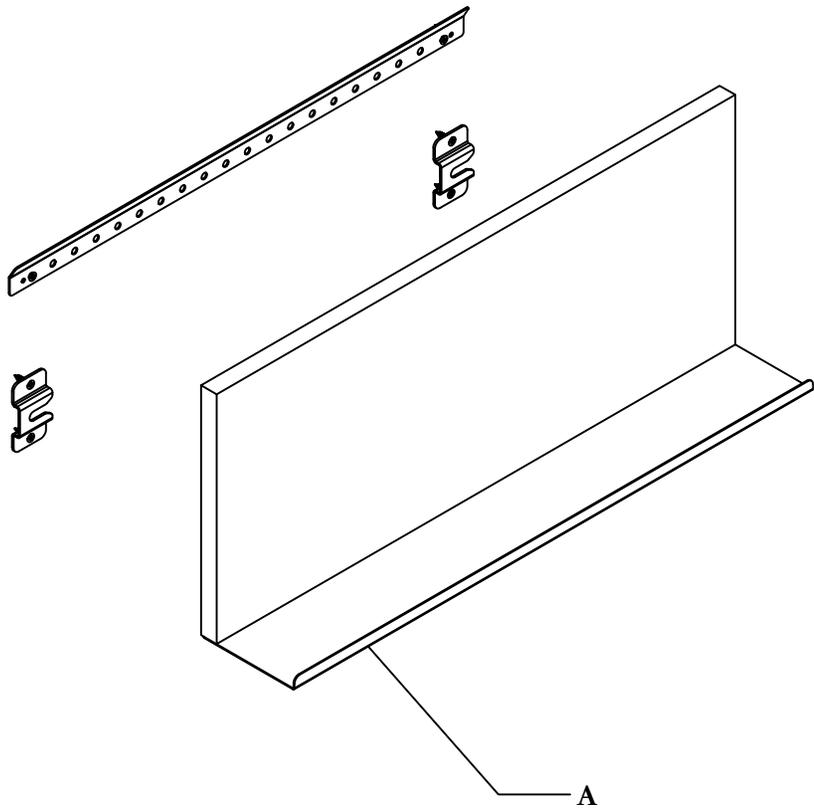

STEP 5: Hang the wall shelf on the wall channel bracket and slide it right to secure it with the wall brackets.