

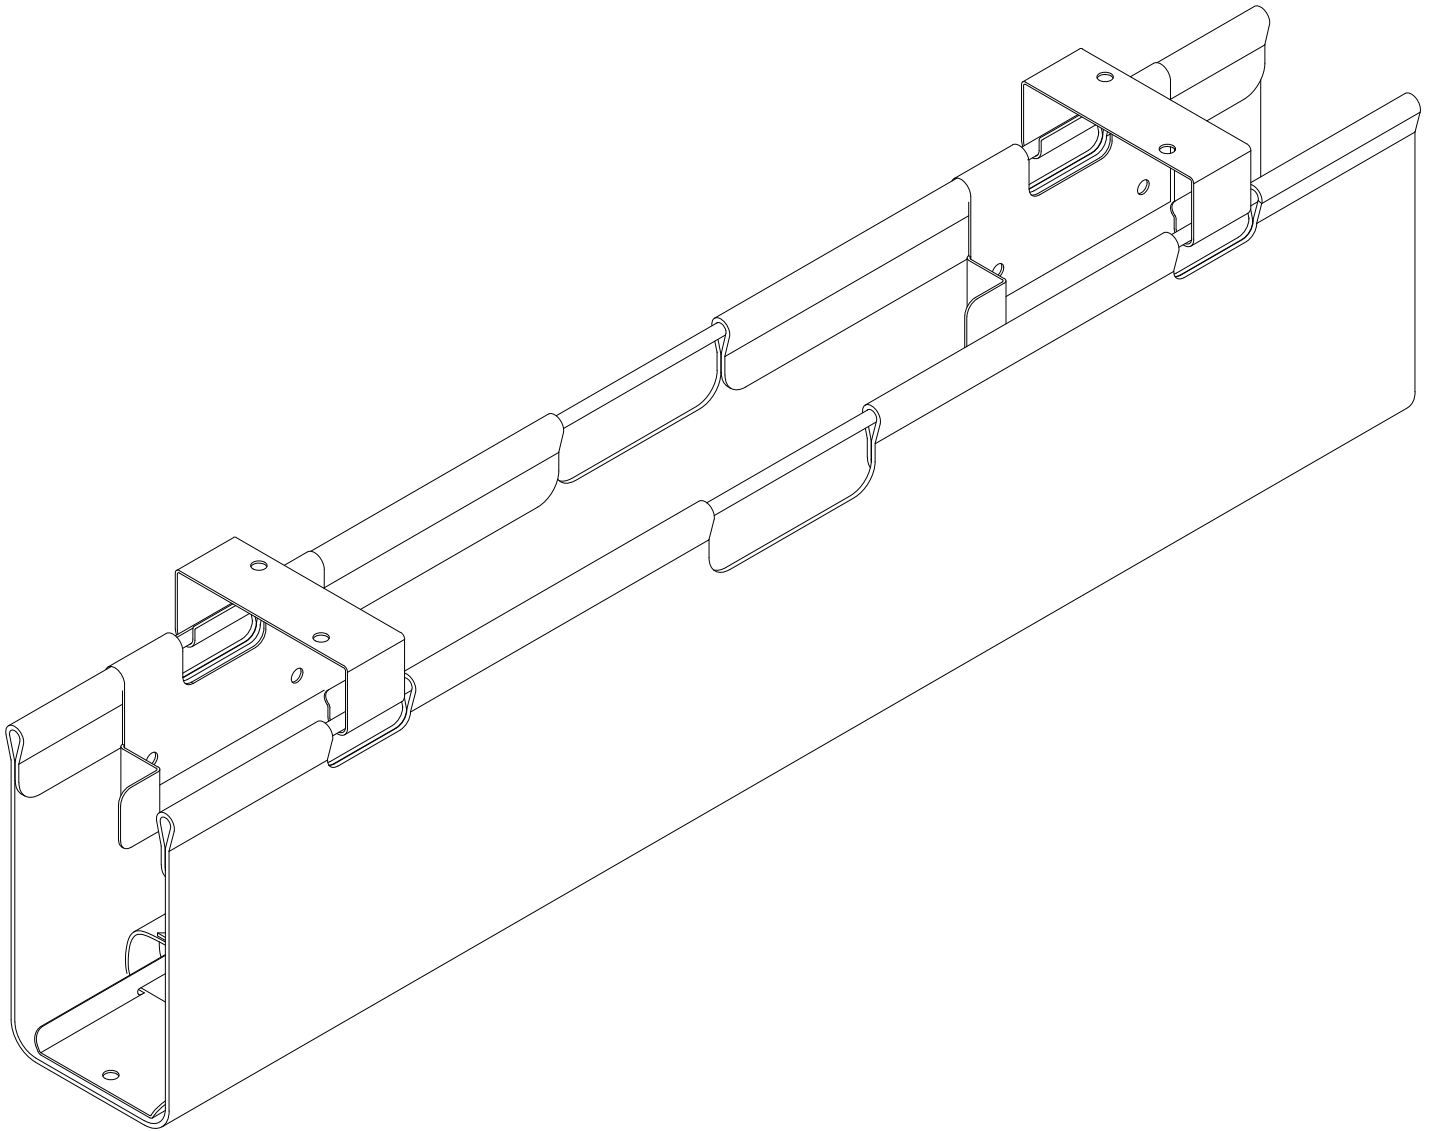
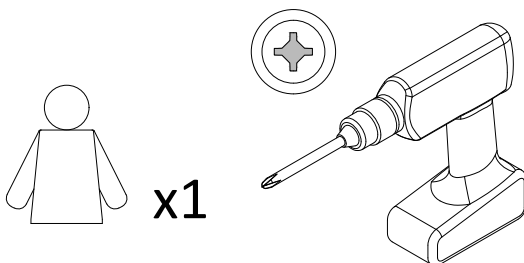
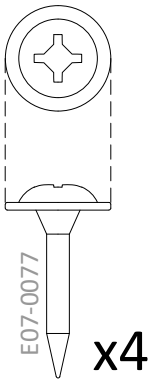
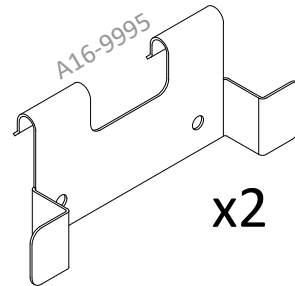


# Wire Management Hammock

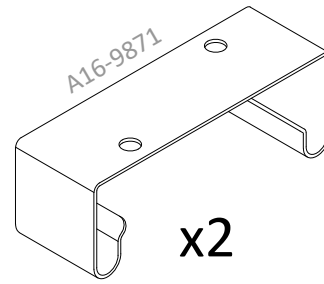

teknion

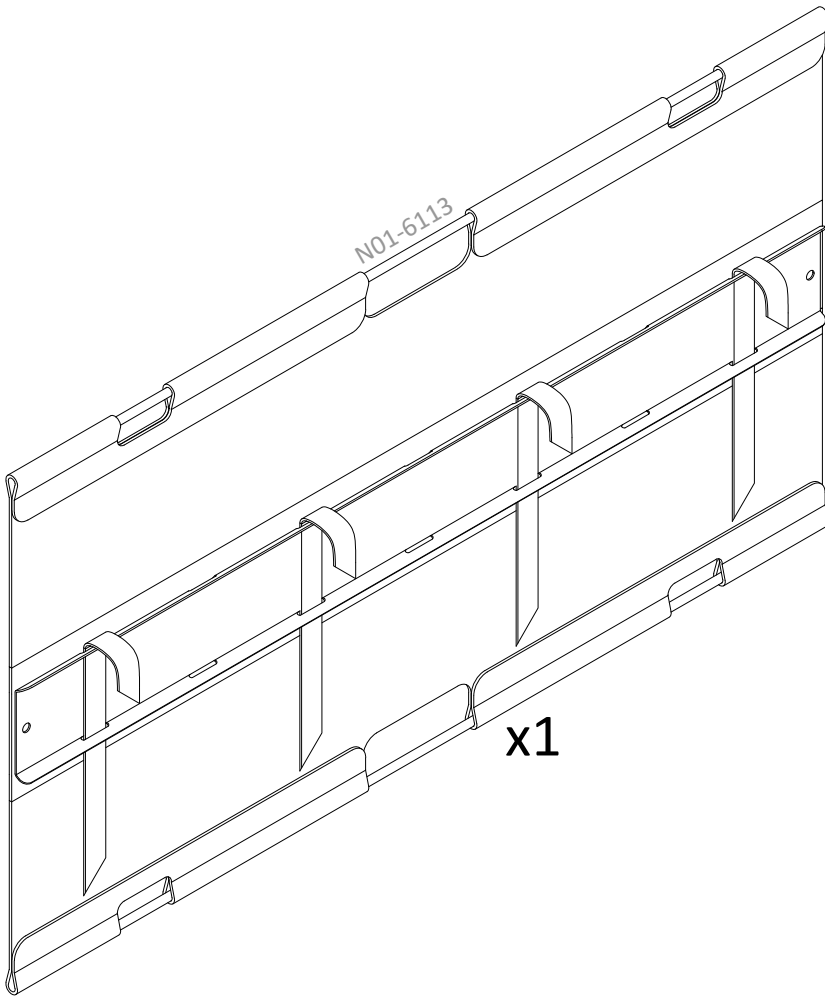


**?**  
1-833-383-5646  
store.support@tekunion.com  
store.tekunion.com  
store.tekunion.ca  
Rev.00

# Bracket Installation Template

## Wire Management Hammock (YEWVH)


FOLD LINE

FOLD LINE




Worksurface Centerline for  
**BRACKET 2** Placement  
(edge of page)


1 - Measure and mark centerline of worksurface at the back edge

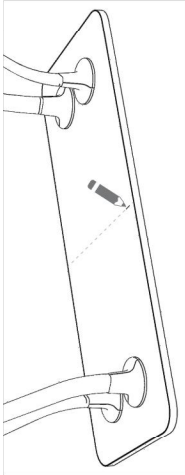


2 - Fold top of this page along the **FOLD LINE** and place the fold on bottom edge of worksurface

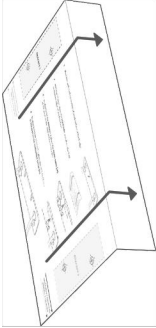

3 - To align holes for **BRACKET 1** place the **RIGHT EDGE** (→) of this page on the worksurface center line

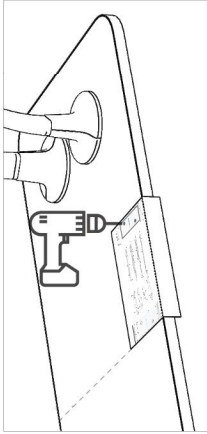


4 - To align holes for **BRACKET 2** place the **LEFT EDGE** (←) of this page on the worksurface center line



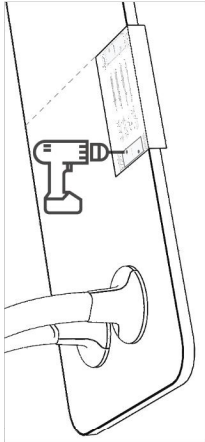


Worksurface Centerline for  
**BRACKET 1** Placement  
(edge of page)


1

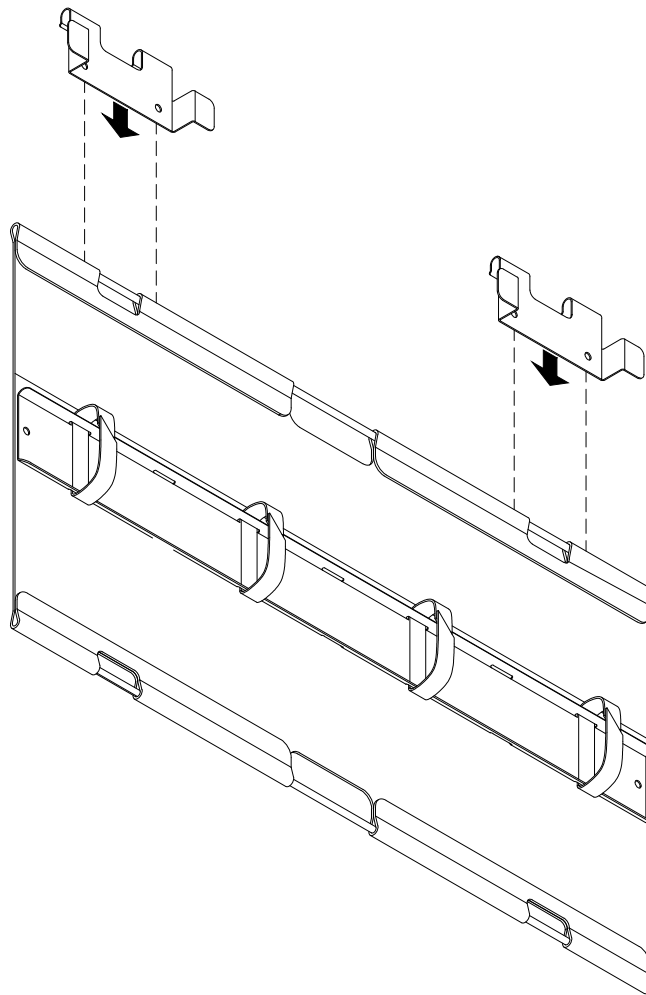


2

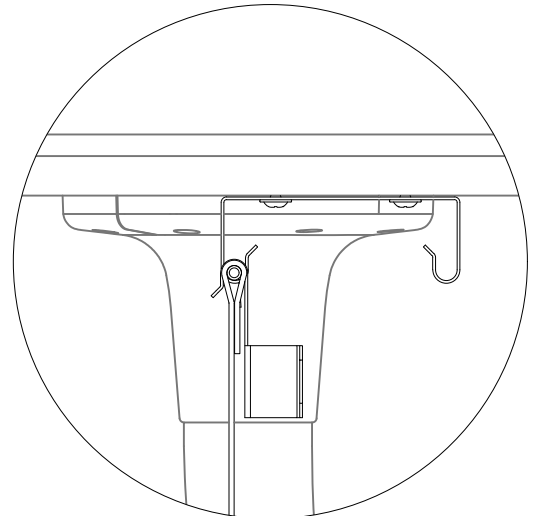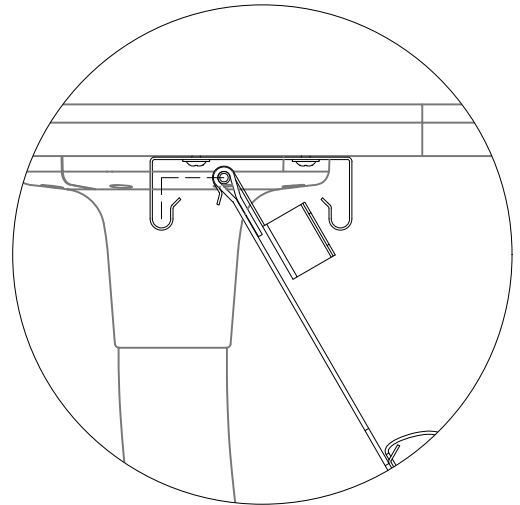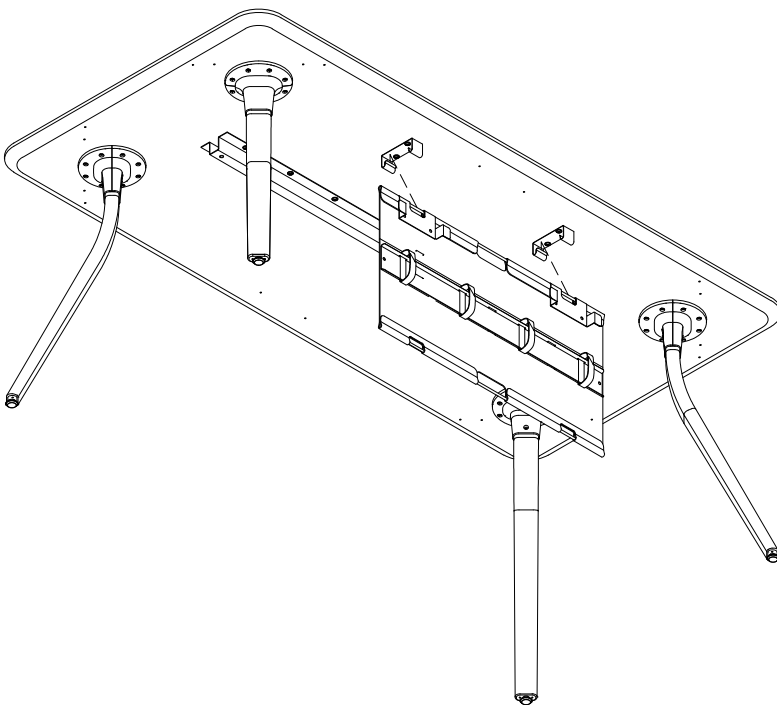


3

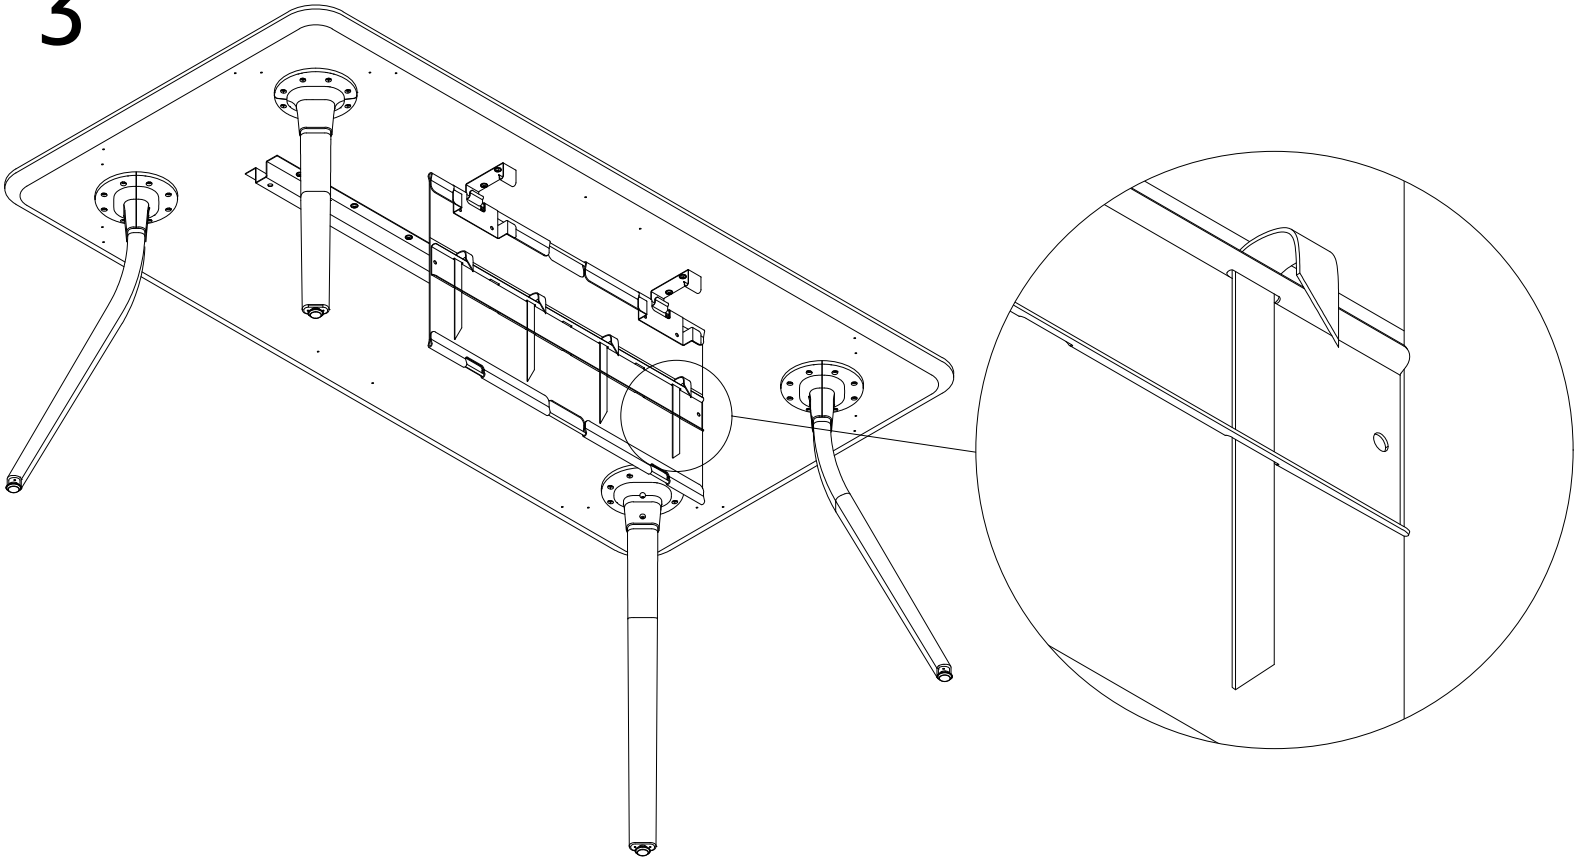

4

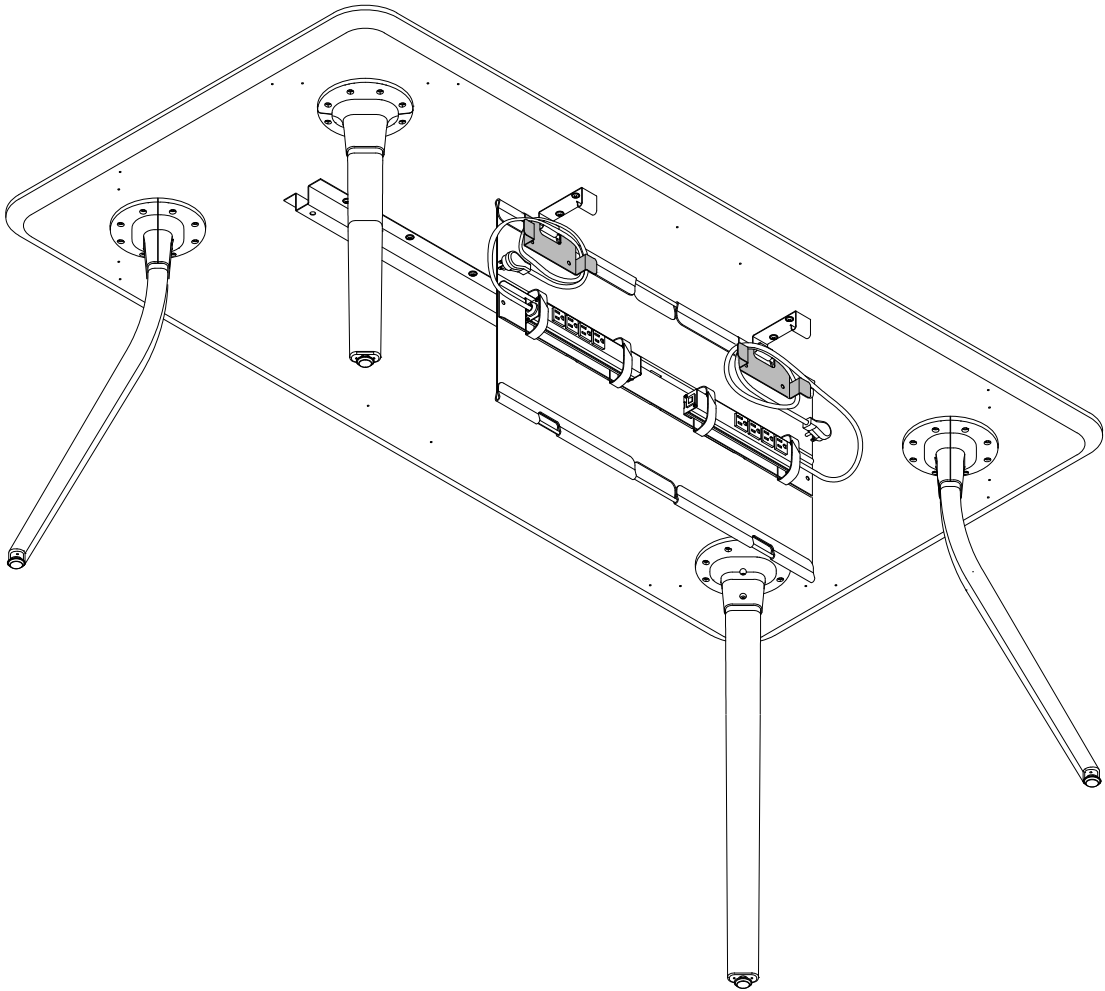

5

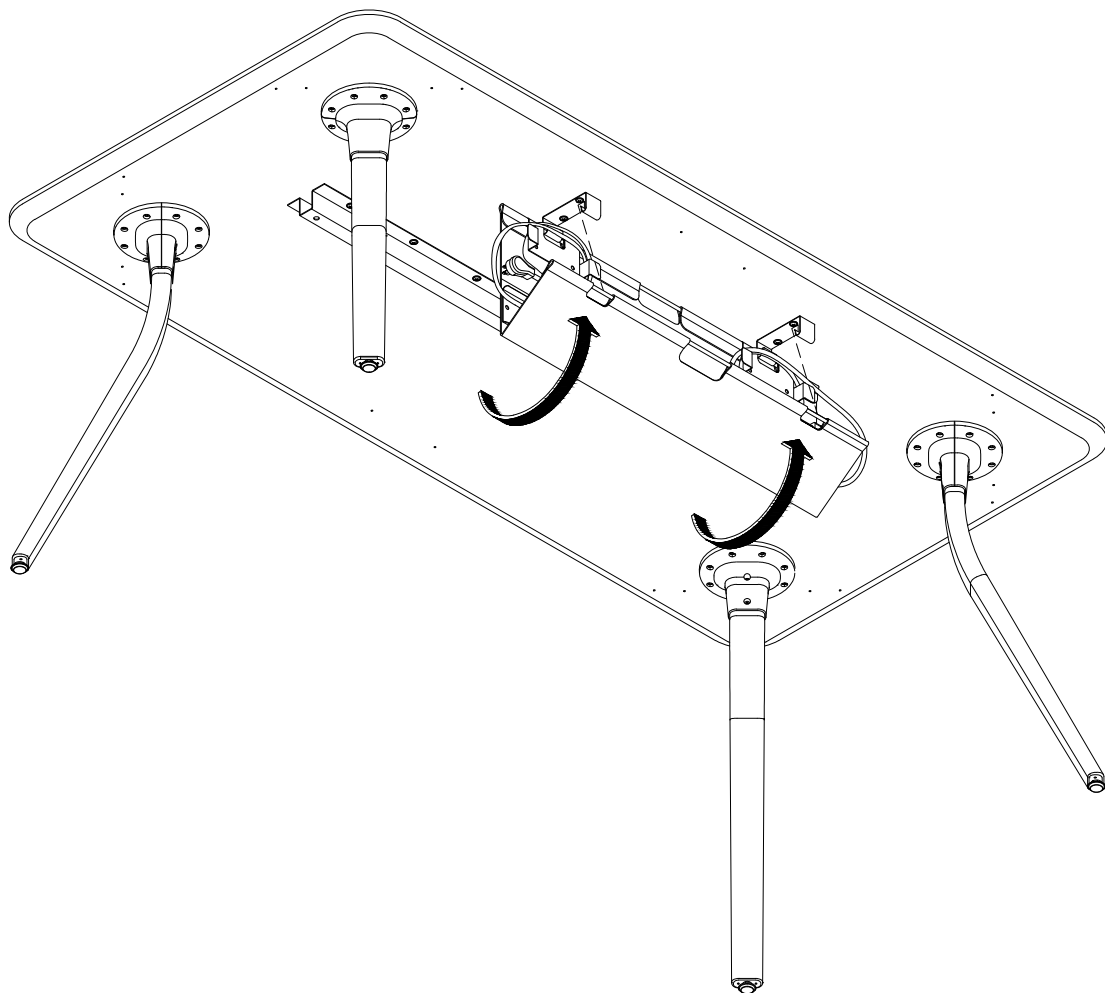

6

